


1. Along the top & bottom of the net are these double selvaged mesh. Gather them up so that they are bunched up like the image below left.

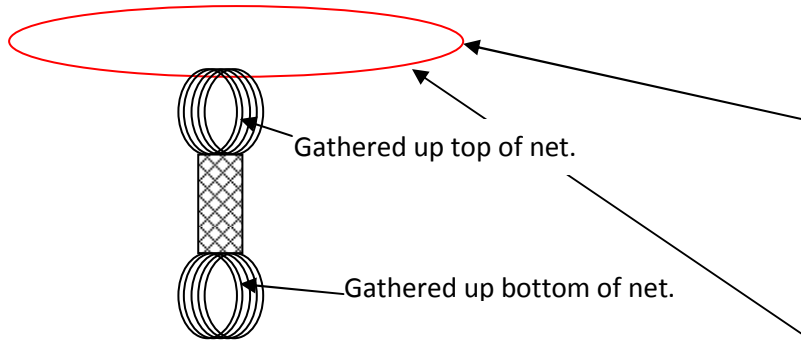

2. Cut a line (4 total) of your choice twice as long as the net plus 4' (i.e., if your net is 10' long, cut the line 24') and thread through each of the end loops and tie the ends of the line like this to form a continuous loop preventing the net from slipping when being stretch and setup as shown below.

Take another line and do the same for the bottom loops. Repeat the procedures for the other net.

3. Same line - the below image shows the net in the setup position.

